



DE AUSTAUSCH DES LED-MODULS

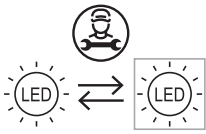

- Der Austausch des LED-Moduls sollte nur von autorisierten Personen (Elektrofachkräften) durchgeführt werden.
- Das Ersatzmodul muss vor dem Austausch bei Projektleuchten GmbH angefordert werden. Die Eigenschaften des LED-Moduls sind dem Etikett in der Leuchte zu entnehmen.
- Bitte beachten, dass bei Leuchten mit hoher IP-Schutzart eine voll versiegelte geschlossene Leuchtenkonstruktion den LED-Austausch nicht gewährleisten kann.
- Bevor die Arbeiten an der Leuchte durchgeführt werden, muss diese vom Stromnetz getrennt werden.
- Öffnen Sie mit einem geeigneten Werkzeug das Gehäuse und schaffen Sie sich Zugang zu dem LED-Modul.
- Entnehmen Sie das LED-Modul und tauschen Sie es gegen das Ersatzmodul des Herstellers aus.
- Achten Sie beim Anschluss auf die richtige Verkabelung. Vertauschen der Kabel kann die LED zerstören!
- LEDs sind empfindlich gegenüber elektrostatischer Entladung. Berühren Sie die Oberfläche des LED-Moduls nicht!
- Schalten Sie anschließend die Stromversorgung ein und prüfen Sie die Leuchte auf ihre Funktion.
- Der Hersteller haftet nicht für Schäden, die durch unsachgemäße oder fehlerhafte Installation an der Leuchte entstehen.

EN REPLACING THE LED MODULE

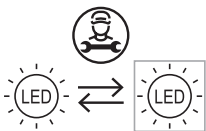

- The replacement of the LED module may only be carried out by authorized specialists! (qualified electricians).
- The replacement module must be requested from Projektleuchten GmbH before it can be exchanged. The properties of the LED module can be found on the label in the luminaire.
- Please note that in the case of luminaires with a high IP protection rating, a fully sealed, closed luminaire construction cannot guarantee LED replacement.
- Before any work on the luminaire is carried out, it must be disconnected from the power supply.
- Open the housing with a suitable tool and gain access to the LED module.
- Remove the LED module and replace it with the manufacturer's replacement module.
- When connecting, make sure that the wiring is correct. Mixing up the cables can destroy the luminaire!
- LEDs are sensitive to electrostatic discharge. Do not touch the surface of the LED module!
- Afterwards switch on the power supply and check the luminaire on their function.
- The manufacturer is not liable for damage resulting by improper or incorrect installation on the luminaire.